



KS5

Manual

Sep. 2024

BITMAIN

BITMAIN TECHNOLOGIES INC.

www.bitmain.com

Table of Contents

1.Overview	3
1.1 KS5 Server components	4
2. Setting up the server	6
2.1 Setting up the server	6
2.2 Configuring the server	7
2.3 Monitor your server	8
2.4 Administering Your Server	9
2.4.1 Checking Your Firmware Version	9
2.4.2 Upgrading Your System	9
2.4.3 Modifying your password	10
2.4.4 Restoring initial settings	10
3. Environmental Requirements	11
3.1 Basic environmental requirements	11
3.1.1 Climatic Conditions	11
3.1.2 Site Requirements of the Server Running Room:	11
3.1.3 Electromagnetic Environmental Conditions	11
3.2 Other Environmental Requirements	11
3.2.1 Requirements of Mechanical Active Substances	11
3.2.2 Requirements of Corrosive Gas	12
4.Regulations:	13
4.1 FCC Notice (FOR FCC CERTIFIED MODELS):	13
4.2 EU WEEE: Disposal of Waste Equipment by Users in Private Household in the European Union	13
4.3 台湾ROHS:	14

1. Overview

The KS5 server is one of the BITMAIN's newest versions. Power supply APW171215 is part of KS5 server. All KS5 servers are tested and configured prior to shipping to ensure easy set up.




Caution:

- 1) Please refer to the layout above to place your goods in usage in case of any damage. The goods should not be placed horizontally.
- 2) The equipment must be connected to an earthed mains socket-outlet. The socket-outlet shall be installed near the equipment and shall be easily accessible.
- 3) The equipment has two power inputs, only by connecting those two power supply sockets simultaneously can the equipment run. When the equipment is powered off, be sure to power off all power inputs.
- 4) DO NOT remove any screws and cables tied on the product.
- 5) DO NOT PRESS the metal button on the cover.
- 6) Please note that the actual server shall prevail.
- 7) The server needs to be manually restarted when the hashrate is abnormal.

1.1 KS5 Server components

The main components and control panel of KS5 server are shown in the following figure:

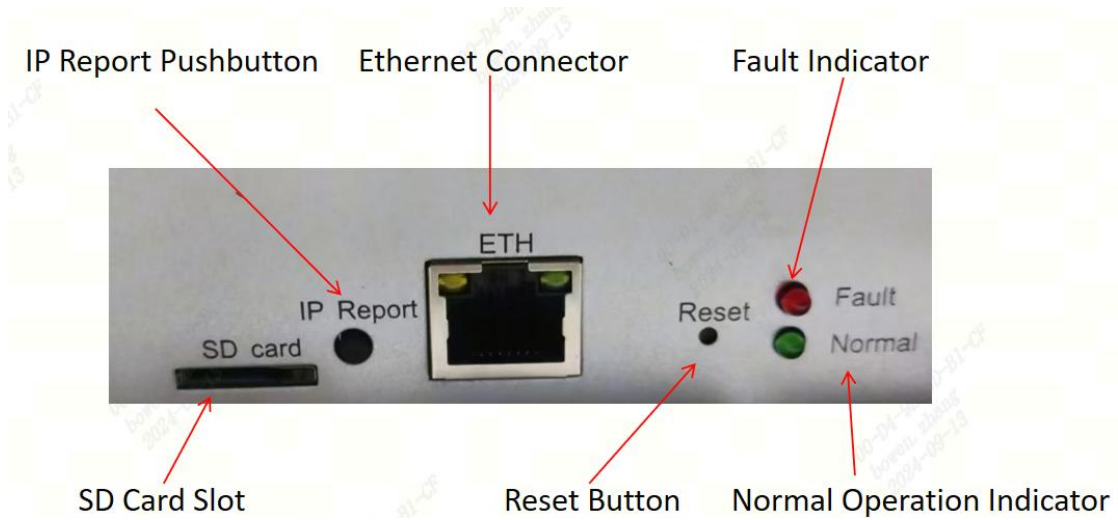

APW171215 Power Supply:**NOTE:**

- Power supply APW171215 is part of KS5 server. For detailed parameters, please refer to the specifications below.
- One ANTWIRE-20SP power cord is needed and should be connected to PDU.


2. Setting up the server

NOTE:

- The file IPReporter.zip is supported by Microsoft Windows only.

2.1 Setting up the server

- 1) Go to the following site: <https://shop.bitmain.com/support/download>

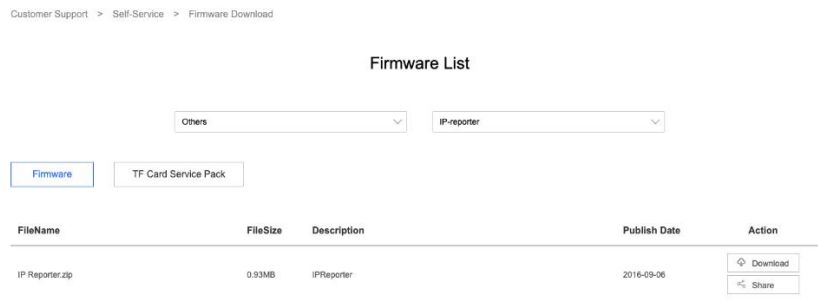


- 2) Download the following file: IPReporter.zip.

- 3) Extract the file.


NOTE:

- The default DHCP network protocol distributes IP addresses automatically.
- 4) Right-click **IPReporter.exe** and run it as Administrator.
 - 5) Select one of the following options:
 - a. Shelf, Step, Position – suitable for farm servers to mark the location of the servers.
 - b. Default – suitable for home servers.
 - 6) Click Start.

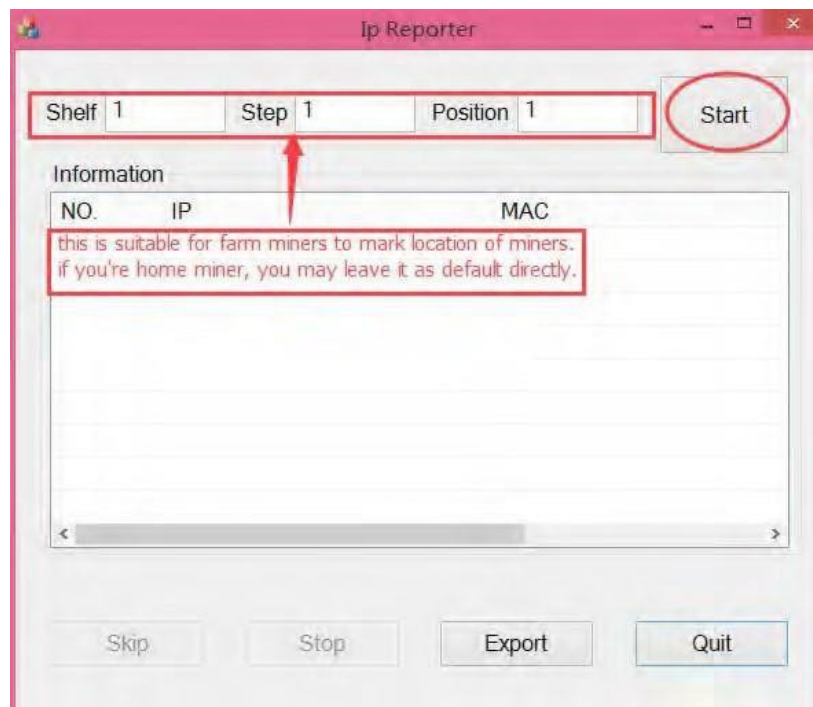

- 7) On the control panel, click the IP Report button. Hold it down until it beeps (about 5 seconds). The IP address will be displayed in a window on your computer screen.

- 8) In your web browser, enter the IP address provided.
- 9) Proceed to login using root for both the username and password.
- 10) In the Protocol section, you can assign a Static IP address (optional).
- 11) Enter the IP address, Subnet mask, gateway and DNS Server.
- 12) Click “Save”.
- 13) Click <https://support.BITMAIN.com/hc/en-us/articles/360018950053> to learn more about gateway and DNS Server.

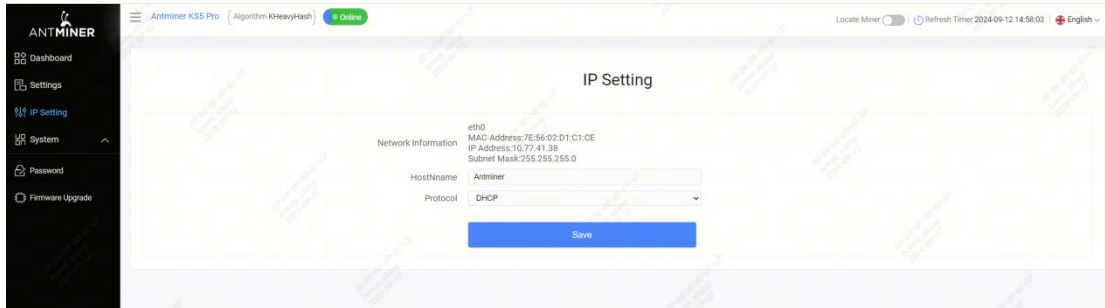

2.2 Configuring the server

Setting up the Pool

To configure the server:

- 1) Click **Settings** as below.



NOTE:

- Fan speed percentage can be adjusted, but we recommend to keep the default setting. The server will adjust the fan speed automatically if the fan speed percentage has yet been selected.
- 2) Set the options according to the following table:


Option	Description
Mining address	<p>Enter the address of your desired pool.</p> <div style="border: 1px solid black; border-radius: 15px; padding: 10px;"> <p>i The KS5 servers can be set up with three mining pools, with decreasing priority from the first pool (pool 1) to the third pool (pool 3). The pools with low priority will only be used if all higher priority pools are offline.</p> </div>
Name	Your worker ID on the selected pool.
Password (optional)	The password for your selected worker.

3) Click Save after the configuration.

2.3 Monitor your server

1) To check the operating status of your server (taking KS5 21T as an example):

Click dashboard marked below to check the server status.

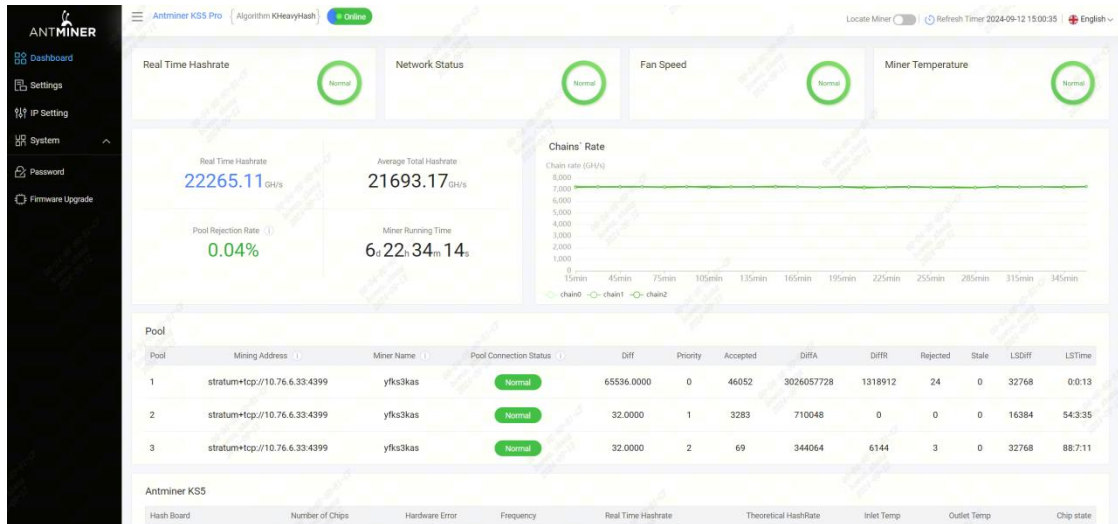

NOTE:

- The KS5 server (21T) is with fixed frequency 650 MHz. Firmware will stop running when the Temp (Outlet) reaches to 101 °C, there will be an error message “over max temp, pcb temp (real-time temp)” shown on the bottom of kernel log page. Meanwhile, the server temperature on the dashboard interface turns to abnormal and shows “Temp is too high”.

2) Monitor your server according to the descriptions in the following table:


Option	Description
Number of chips	Number of chips detected in the chain.
Frequency	ASIC frequency setting.
Real Hashrate	Real-time Hashrate of each hash board (GH/s).
Inlet Temp	Temperature of the inlet (°C).
Outlet Temp	Temperature of the outlet (°C).
Chip state	One of the following statuses will appear: <ul style="list-style-type: none"> ● The Green Icon - indicates normal ● The Red Icon - indicates abnormal

2.4 Administering Your Server

2.4.1 Checking Your Firmware Version

To check your firmware version:

- 1) Enter the backstage of your server, find the firmware version on the bottom.
- 2) Firmware Version displays the date of the firmware your server uses. In the examples below, the server is using firmware version 20240828.

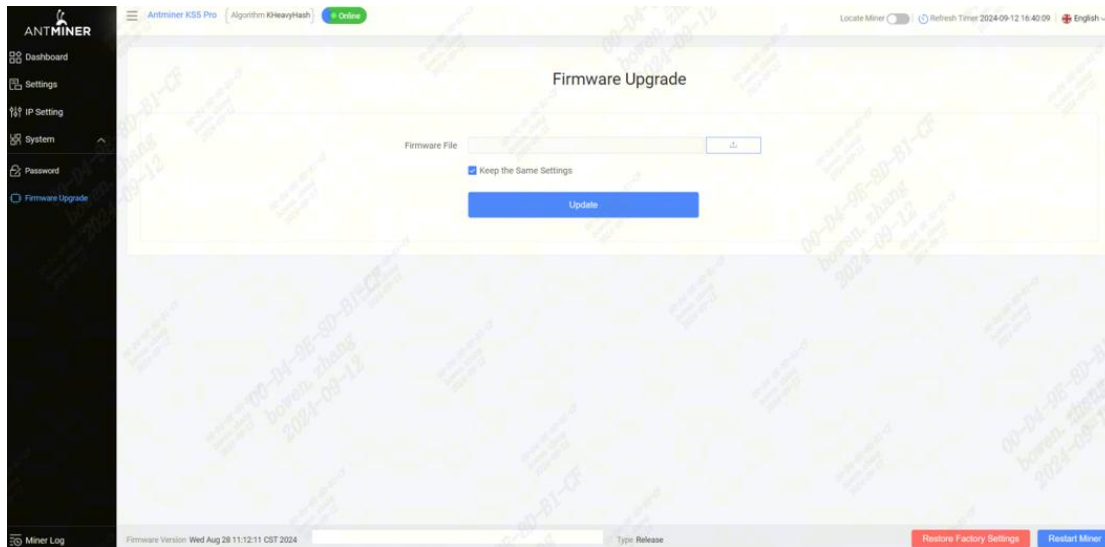


2.4.2 Upgrading Your System


Caution: Make sure that the KS5 server remains powered during the upgrade process. If power fails before the upgrade is completed, you will need to return it to Bitmain for repair.

To upgrade the server's firmware:

- 1) In System, click Firmware Upgrade.

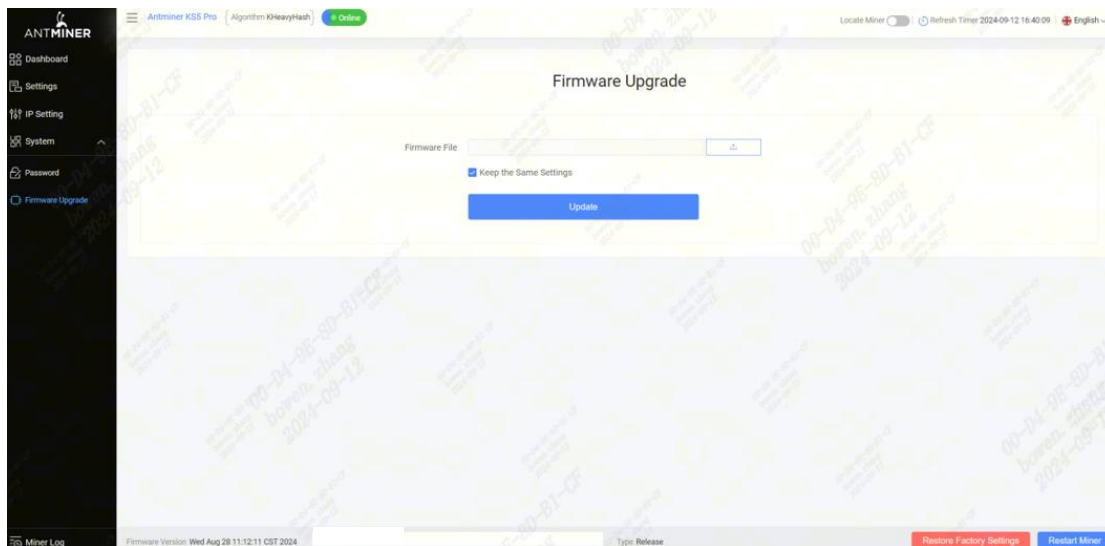


- 2) For Keep Settings:
 - a. Select "keep settings" to keep your current settings (default).
 - b. Unselect "keep settings" to reset the server to default settings.

- 3) Click the  button and navigate to the upgrade file. Select the upgrade file, then click Update.
- 4) When the upgrade is completed, restart the server and it will turn to the setting page.
- 5) Click one of the following options:
 - a. Reboot - to restart the server with the new firmware.
 - b. Go Back - to continue mining with the current firmware. The server will load the new firmware next time it is restarted.

2.4.3 Modifying your password

To change your login password:

- 1) In System, click the Password tab.
- 2) Set your new password, then click **Save**.

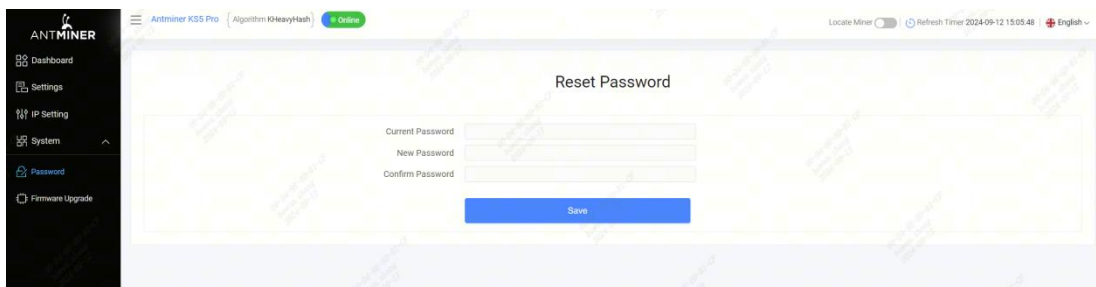

2.4.4 Restoring initial settings

To restore your initial settings

- 1) Turn on the server and let it run for 5 minutes.
- 2) On the controller front panel, press and hold the **Reset** button for 10 seconds.

Cautions: Resetting your server will reboot it and restore its default settings. The red LED will automatically flash once every 15 seconds if the reset is operated successfully.

3. Environmental Requirements

Please run your server in accordance with the following requirements

3.1 Basic environmental requirements

3.1.1 Climatic Conditions

Description	Requirement
Operating Temperature	0-40°C
Operating Humidity	10-90%RH (non-condensing)
Storage Temperature	-20-70°C
Storage Humidity	5-95%RH (non-condensing)
Altitude	<2000m

3.1.2 Site Requirements of the Server Running Room:

Please keep the server running room away from industrial pollution sources:

For heavy pollution sources such as smelters and coal mines, the distance should be more than 5km.

For moderate pollution sources such as chemical industries, rubber and electroplating industries, the distance should be more than 3.7km.

For light pollution sources such as food factories and leather processing factories, the distance should be more than 2km. If unavoidable, the site should be chosen in the perennial upwind direction of the pollution source.

Please do not set your location within 3.7km from the seaside or the salt lake. If unavoidable, it should be built as airtight as possible, equipped with air conditioning for cooling.

3.1.3 Electromagnetic Environmental Conditions

Please keep your site away from transformers, high-voltage cables, transmission lines and high-current equipment, for example, there should be no high-power AC transformers (>10KA) within 20 meters, and no high-voltage power lines within 50 meters. Please keep your site away from high-power radio transmitters, for example, there should be no high-power radio transmitters (>1500W) within 100 meters.

3.2 Other Environmental Requirements

The server running room shall be free of explosive, conductive, magnetically conductive and corrosive dust. The requirements of mechanical active substances are shown below:

3.2.1 Requirements of Mechanical Active Substances

Mechanical Active Substance	Requirement
Sand	$\leq 30\text{mg}/\text{m}^3$
Dust (suspended)	$\leq 0.2\text{mg}/\text{m}^3$

Dust (deposited)	$\leq 1.5 \text{ mg/m}^2\text{h}$
------------------	-----------------------------------

3.2.2 Requirements of Corrosive Gas

Corrosive Gas	Unit	Concentration
H ₂ S	ppb	< 3
SO ₂	ppb	< 10
Cl ₂	ppb	< 1
NO ₂	ppb	< 50
HF	ppb	< 1
NH ₃	ppb	< 500
O ₃	ppb	< 2

Note: ppb (part per billion) refers to the unit of concentration, 1ppb stands for the volume ratio of part per billion.

4.Regulations:

4.1 FCC Notice (FOR FCC CERTIFIED MODELS):

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE:

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

4.2 EU WEEE: Disposal of Waste Equipment by Users in Private Household in the European Union

This symbol on the product or on its packaging indicates that this product must not be disposed of with your other household waste. Instead, it is your responsibility to dispose of your waste equipment by handing it over to a designated collection point for the recycling of waste electrical and electronic equipment. The separate collection and recycling of your waste equipment at the time of disposal will help to conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment. For more information about where you can drop off your waste equipment for recycling, please contact your local city office, your household waste disposal service or the shop where you purchased the product.



4.3 台湾ROHS:

設備名稱: KS5

服務器型號: KS1-10

單元	有害物質					
	鉛 (Pb)	汞 (Hg)	鎘 (Cd)	六價鉻 (Cr+6)	多溴聯苯 (PBB)	多溴二苯醚 (PBDE)
外殼	○	○	○	○	○	○
電路板組件	—	○	○	○	○	○
其他線材	—	○	○	○	○	○

備考1. “超出 0.1 wt %” 及 “超出 0.01 wt %” 係指限用物質之百分比含量超出百分比含量基準值。

備考2. “○” 係指該項限用物質之百分比含量未超出百分比含量基準值。

備考3. “—” 係指該項限用物質為排除項目。